


How to adjust dispensing tension

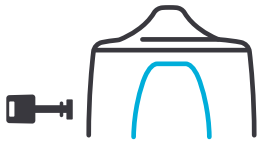


Open dispenser

Using the dispenser key, open the front door to expose the interior.



Remove wipe roll

Remove your wipe roll from the dispenser and place it to the side.

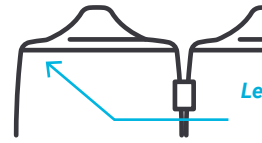


Least Tension 0
(Loosest)



6 Most Tension
(Tightest)


Adjust dispenser

From the interior, the tensioner is located underneath the top of the dispenser by the nozzle. Insert the dispenser key into the tensioner and rotate clockwise to tighten, and counter-clockwise to loosen the tension setting. The tensioner will click as you rotate the key.

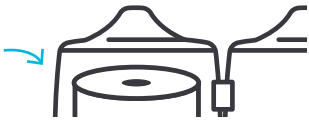


Replace wipe roll

Remove the dispenser key and replace the wipe roll back into the dispenser.

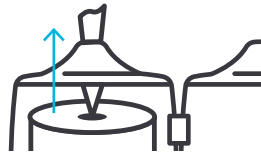

Feed wipes through nozzle

From the center of the roll, feed the wipes back through the nozzle.

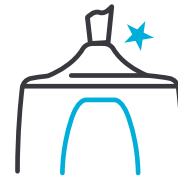

Close dispenser door

Close the dispenser door when finished.