

Changing the Filter

You will require a large plastic trash bag, a pair of work gloves and a Phillips screwdriver.



1
Unplug your Austin Air cleaner from the power outlet.



2
Turn your Austin Air cleaner upside down on a soft surface.



3
Using a Phillips screwdriver, remove the four retaining screws from the bottom cover.



4
Wearing a protective pair of work gloves, lift the bottom cover off and set aside.



5
Carefully remove the filter and dispose in a plastic trash bag.



6
Remove the outer pre-filter and dispose in the same plastic trash bag.



7
Install the new outer pre-filter by aligning the pre-filter seam with the power cord.



8
Install the new filter top side down.



9
Replace the bottom cover and screw down tightly.



10
Turn your Austin Air cleaner right side up and operate on the High (III) setting for at least one hour.

DETACH HERE


austin

AIR SYSTEMS

Filter Warranty Activation

Register online at www.austinair.com or by completing and returning this Filter Warranty Activation card.

First-Class Postage Required
Post Office will not deliver without proper postage

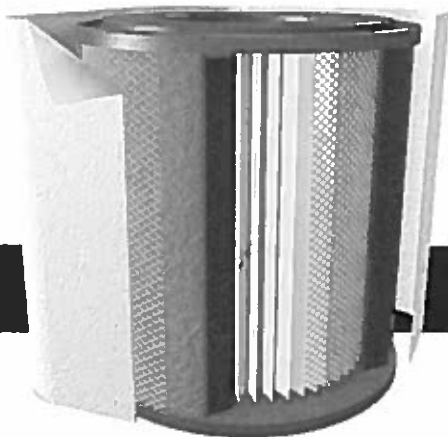

Austin Air Systems, LTD
Warranty Activation
500 Elk Street
Buffalo, NY
14210-2208

URGENT! Activate your warranty today.