

LD-10 SS Caster Installation & Set Up

Please read carefully before first use.

Protective film should not be peeled off until completing all steps.

Caster Installation

1) Carefully lay the front side of the unit down on a flat surface.

2) Using the (16) 1/4-20 x 3/8" fasteners provided, attach (2) rigid casters towards the front of the unit, and attach (2) swivel casters towards the back of the unit.

3) Place unit upright and proceed with initial set up.

Initial Set up

1) During shipment, plumbing components may have loosened and must be checked prior to use. Begin by checking upper plumbing components.

2) Verify PVC tailpiece has not slipped down. Distance from top of PVC locknut to bottom of drain locknut should NOT be less than 3.5".

a) If adjustments are necessary, loosen PVC locknut, unscrew tank lid, and push PVC tailpiece into sink tailpiece until snug. Retighten PVC locknut and screw tank lid back on.


3) Verify remaining upper plumbing components and hardware are tightened.


Note: tank lid does not provide a water tight seal. Tank must be regularly emptied before reaching 10 gallon capacity.

4) Check discharge hose for any loose fittings or components and verify valve handle is in the closed position.

5) Perform leak test prior to first service use. Inspect and tighten any missed loose fittings or hardware discovered during leak test. Repeat leak test as necessary.



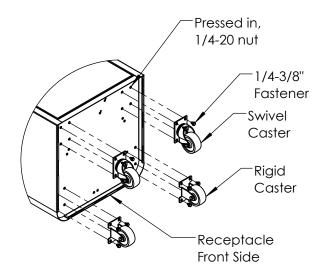

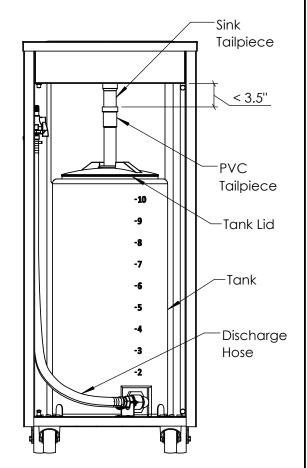

Note: Tank style may vary.

03/03/2023

79-015-2 Rev. 1